


TSDactical

SD700

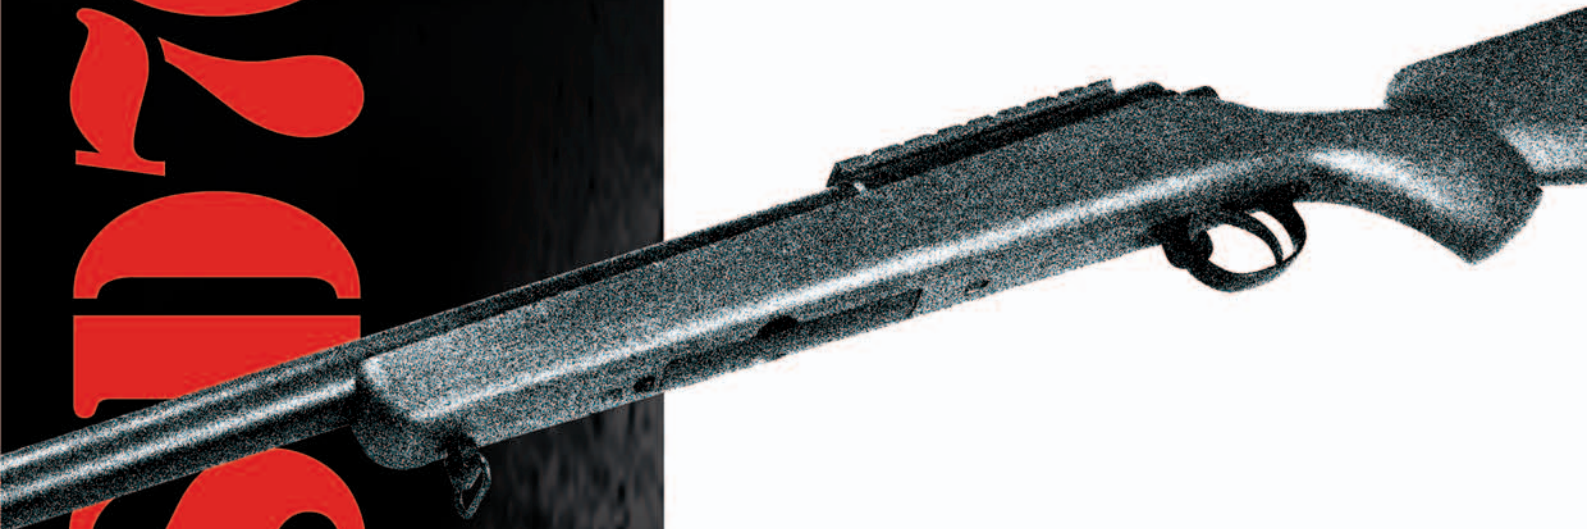


**INSTRUCTION
MANUAL**

WARNING

Always read through this manual before operation!

Read through this manual before shooting, paying special attention to safe operation!


Failing to do so may cause injury, accidents, or damage to the gun!

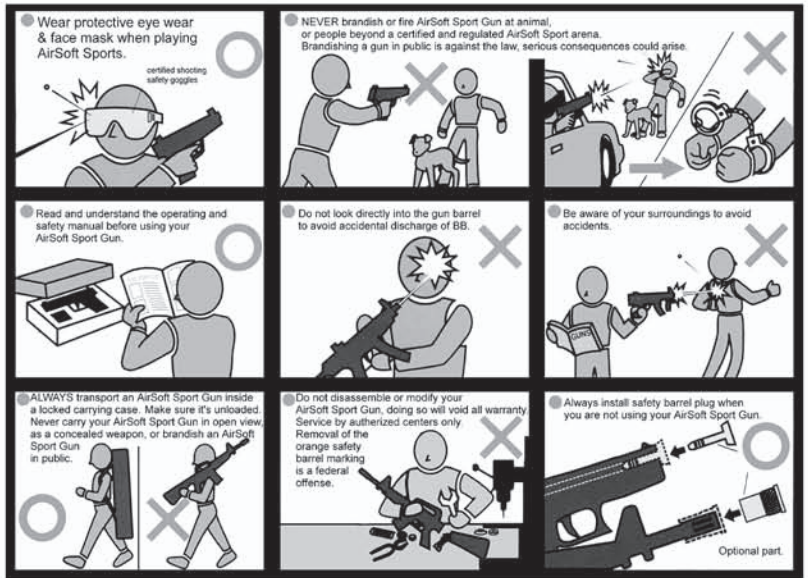


WARNING	
18 Years or older	Operation of this air gun is for viewing purposes only. All legal bearing licenses users will follow all applicable air gun laws and regulations. Sales and usage restricted to persons 18 years of age or older.
Injury Caution	When BB's can reach 90 to 100 meters, and up to 200 for Extreme shooting and this shooting may result in severe eye damage and in other injuries. Always wear eye and body protection. Always point it toward all people in an area.
Please read manual!	Always know safe handling and production used in the manual. Understand fully all warnings of the air gun. Use the air gun with full recognition of its safety warning. Use within full compliance of State and local laws.
CHOKING HAZARD Some parts may contain small children.	Contact your Dealer for a replacement manual.

COMPONENTS


- 1. Outer Barrel
- 2. Front Sling Loop
- 3. Hop Up Adjustment
- 4. Magazine Catch Button
- 5. Tactical Rail
- 6. Bolt
- 7. Trigger
- 8. Rear Sling Loop
- 9. Stock
- 10. Butt Plate

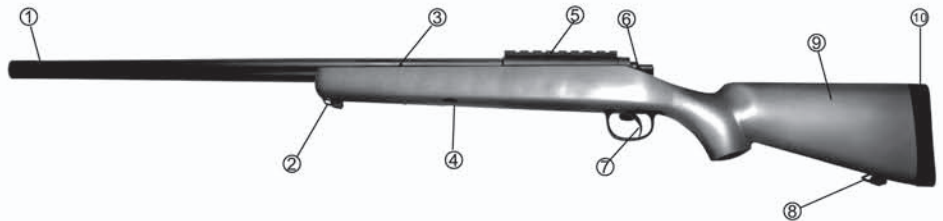

1 SAFETY SETTING

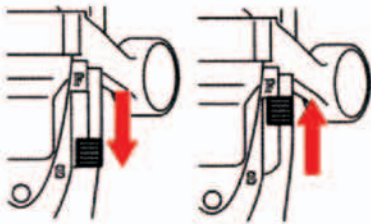

When you are not firing the gun or during storage, **always** set the selector to the **Safe** position and attach the protective cap to the muzzle.

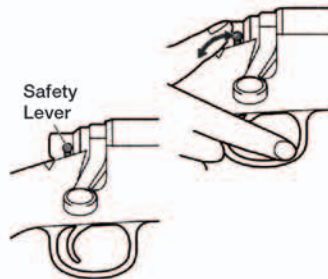


When the safety lever is set to the "On" position, the trigger will not move. Please do not pull the trigger, otherwise you may damage the gun.


When the safety lever is set to the "Off" position, it is ready for shooting.

The gun will fire when the trigger is pulled.

2 LOADING BB'S INTO AND SETTING THE MAGAZINE

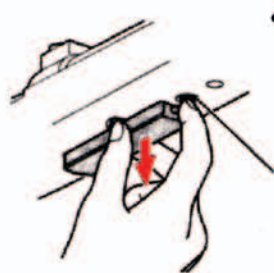


Removing Magazine
Press the magazine release button to release magazine.

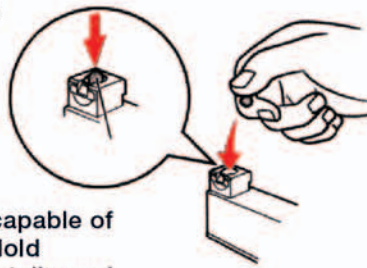

The magazine is capable of holding 30 BB's. Hold magazine horizontally, and insert BB's as shown. Or, use the BB Speedloader to load BB's.

Caution
Do not overload the magazine.

Replace Magazine
Reinsert magazine into gun until a "Click" sound is heard.

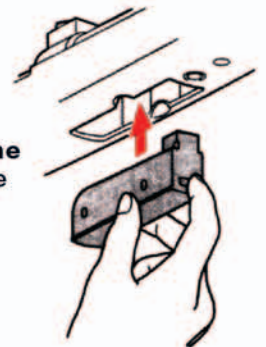


Load BB'S into Speedloader

Open the Speedloader Cap. Insert 6mm BB'S into the Speedloader.

Press the Rod Release button to release the Spring Rod.

Insert Speedloader into the magazine and pump Spring Rod until magazine is full.

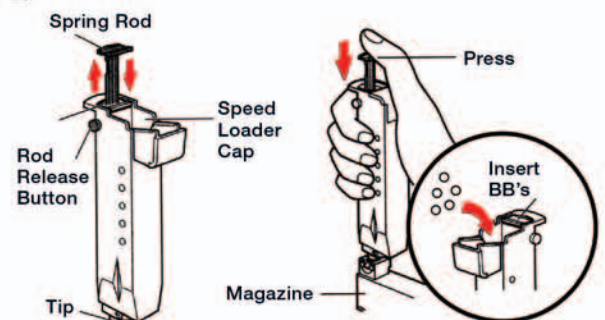

3 OPERATION


- The bolt retracts at the same time the operating rod is pulled.

To fire the gun, pull back Operating Rod **all the way back**, until a “click” is heard, then release.

Make sure the Safety release is in “Off” position. The gun is now ready for firing.

Pull Trigger.


Replace Safety release to “On” position when gun is not in use.

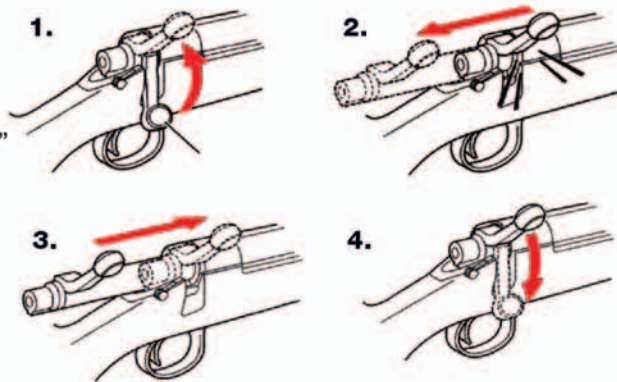

WARNING-CAUTION

Be careful not to put your finger in the bolt as it will close quickly when the operating rod is released.

4 HOP UP ADJUSTMENT

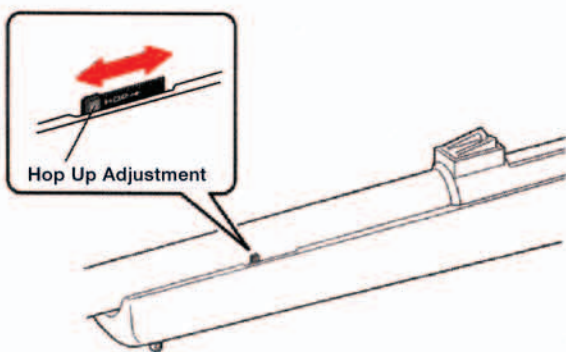


- Adjust the Hop Up Adjustment Lever to achieve more, or less Hop Up.

WARNING

Be careful not to catch your fingers in the dummy bolt


CAUTION

Never hold the gun sideways as the BB will curve right or left.

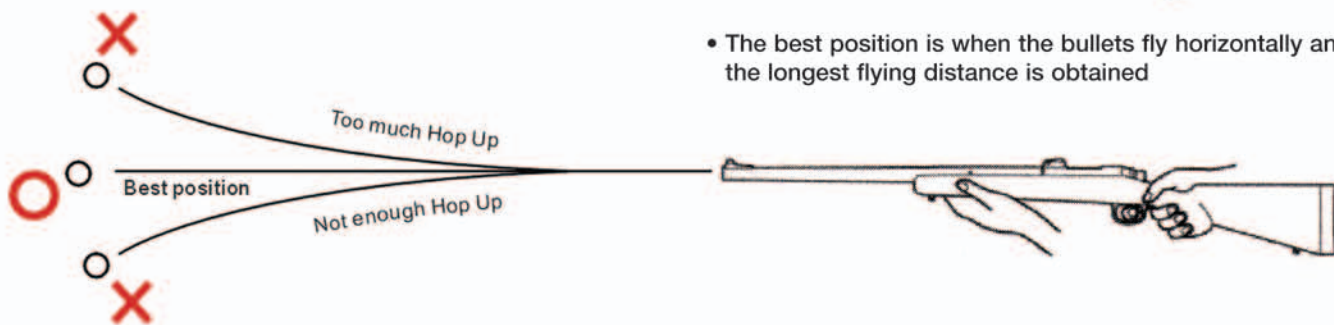

- The best position is when the bullets fly horizontally and the longest flying distance is obtained

5 HOW TO AIM/HOLD

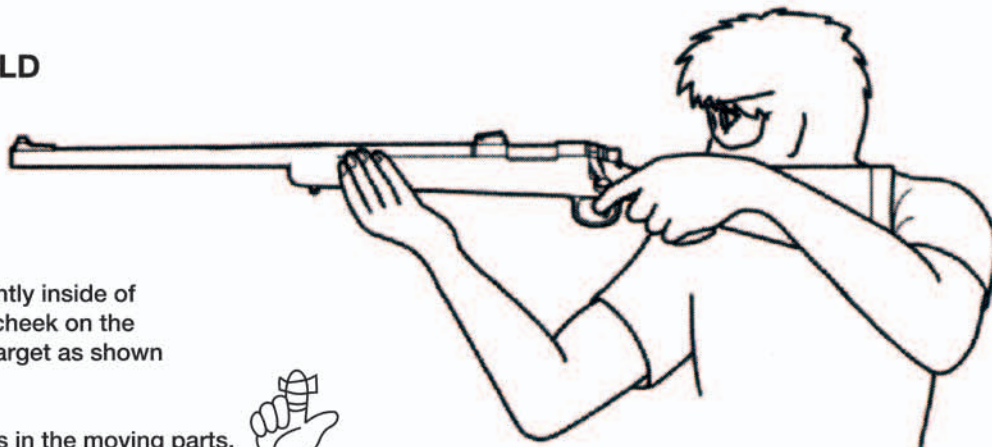


- Press the butt plate against slightly inside of the shoulder joint and put your cheek on the stock. Aim at the center of the target as shown in the above figure.
- Be careful not to put your fingers in the moving parts.



6 MAINTENANCE

• Maintenance when bull speed becomes low

1. Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into barrel.
2. After completing cleaning, use the cleaning rod (with cotton) as shown below to Remove excess oil.

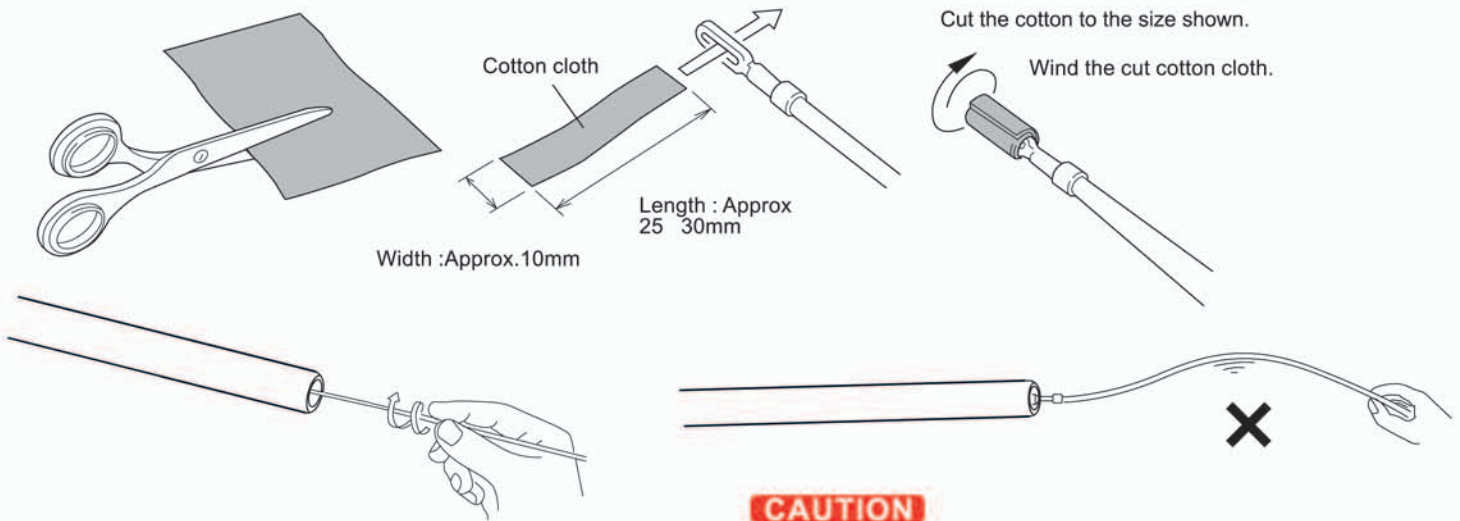


Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.

CAUTION


- Always turn the hop up lever completely down before inserting Cleaning Rod.
- It is difficult to insert the rod if you hold the rod at the end.

• Removing Clogged BB's (Set the Safety button to ON and remove the magazine beforehand.)

1. Remove the Magazine
2. Turn the hop up dial completely down and insert the Cleaning Rod from the lead edge of the barrel.

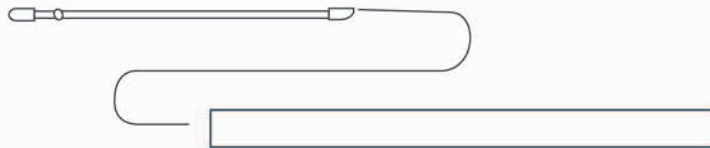

3. Be careful so that the angled part of the Cleaning Rod faces down, and remove clogged bb's

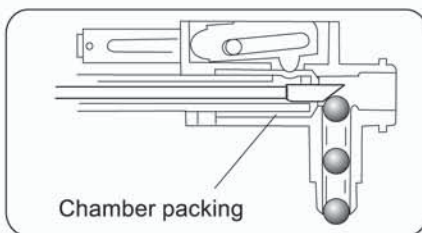

Make sure to clean the barrel chamber whenever BB's are removed.

- When BB's are clogged, immediately stop operation, Remove clogged BB's and then restart operation of the air gun. (If operation is continued with BB's being clogged, the mechanism may be damaged.)
- Be careful during maintenance, as the inside chamber is precisely designed and can be damaged easily. Use of a hard brush may damage the hop chamber packing.

WARNING	
 18 Years or older	<ul style="list-style-type: none"> • Operation of this air gun is for training purposes only, at legal training facilities. Users will follow all applicable air gun laws and regulations. Sales and usage restricted to persons 18 years of age or older.
 Injury Caution	<ul style="list-style-type: none"> • Plastic BB's can reach 50 to 60 meters, and up to 300 fps. Careless shooting and mis-handling may result in severe eye damage and or other injuries. Always wear eye and body protection. Never point or shoot at people or animals.
 Please read manual!	<ul style="list-style-type: none"> • Always follow safe handling and precautions listed in the manual. Understand fully all operations of this air gun. Use this air gun with full recognition of it's caution warnings. Use within full compliance of State and local laws.
CHOKING HAZARD Keep away from small children.	Contact your Dealer for a replacement manual.



www.airsoftSD.com