 


TSB'S

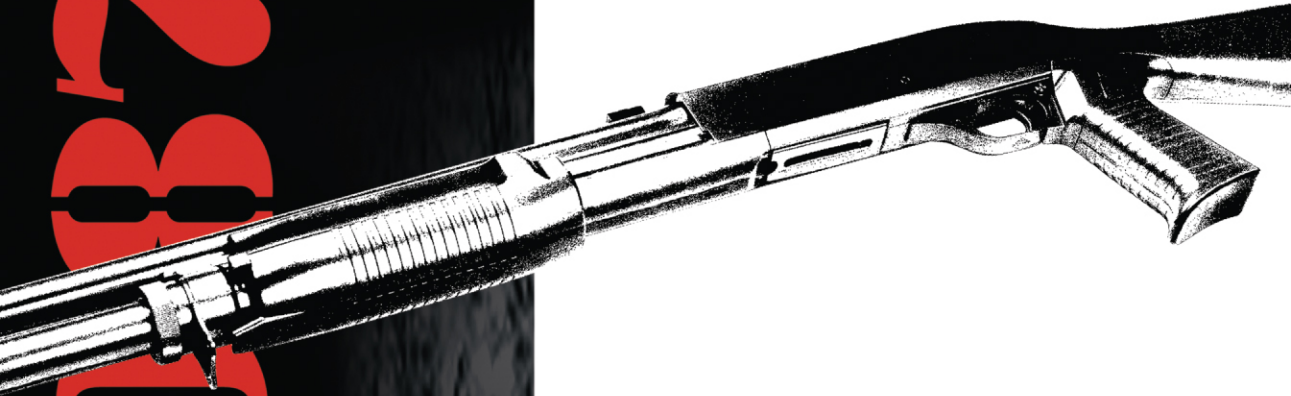

3 Round Burst






**INSTRUCTION
MANUAL**





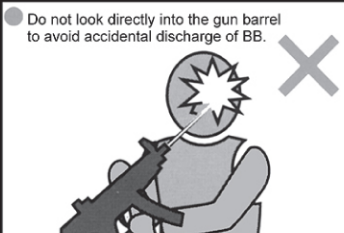
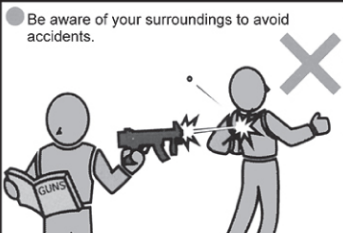



WARNING

Always read through this manual before operation!

Read through this manual before shooting, paying special attention to safe operation!

Failing to do so may cause injury, accidents, or damage to the gun!

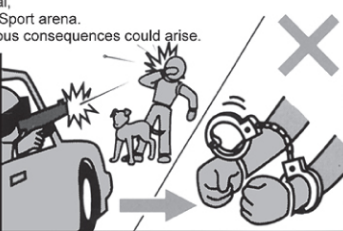WARNING	
 18 Years or older	<ul style="list-style-type: none">● Operation of this air gun is for training purposes only, at legal training facilities. Users will follow all applicable air gun laws and regulations. Sales and usage restricted to persons 18 years of age or older.
 Injury Caution	<ul style="list-style-type: none">● Plastic BB's can reach 50 to 60 meters, and up to 300 fps. Careless shooting and mis-handling may result in severe eye damage and or other injuries. <u>Always wear eye and body protection. Never point or shoot at people or animals.</u>
 Please read manual!	<ul style="list-style-type: none">● Always follow safe handling and precautions listed in the manual. Understand fully all operations of this air gun. Use this air gun with full recognition of it's caution warnings. Use within full compliance of State and local laws.
CHOKING HAZARD Keep away from small children.	Contact your Dealer for a replacement manual.

<ul style="list-style-type: none">● Wear protective eye wear & face mask when playing AirSoft Sports. <small>certified shooting safety goggles</small> 	<ul style="list-style-type: none">● NEVER brandish or fire AirSoft Sport Gun at animal, or people beyond a certified and regulated AirSoft Sport arena. Brandishing a gun in public is against the law, serious consequences could arise. 	
<ul style="list-style-type: none">● Read and understand the operating and safety manual before using your AirSoft Sport Gun. 	<ul style="list-style-type: none">● Do not look directly into the gun barrel to avoid accidental discharge of BB. 	<ul style="list-style-type: none">● Be aware of your surroundings to avoid accidents. 
<ul style="list-style-type: none">● ALWAYS transport an AirSoft Sport Gun inside a locked carrying case. Make sure it's unloaded. Never carry your AirSoft Sport Gun in open view, as a concealed weapon, or brandish an AirSoft Sport Gun in public. 	<ul style="list-style-type: none">● Do not disassemble or modify your AirSoft Sport Gun, doing so will void all warranty. Service by authorized centers only. Removal of the orange safety barrel marking is a federal offense. 	<ul style="list-style-type: none">● Always install safety barrel plug when you are not using your AirSoft Sport Gun.  <small>Optional part.</small>

1 Components



2 Safety Setting

- Place the shotgun flat on a table in front of you with the barrel pointing to the left and the pistol grip bottom toward you.
- The Safety/Fire Button is on the "SAFE" position ,if the Button is "Down" as in Fig 1.1.
- The Safety/Fire Button is on "FIRE" position, if the Button is "Up" as in Fig .1.2.
- To change the Safety/Fire position, press the button from the "Up" side to the opposite side.



Fig.1.1 - SAFE



Fig.1.2 - FIRE

Safety/Fire Selector

3 Loading and Setting the Magazine

- 1.Push Shell Cartridge Compartment Lever backward as in Fig .2.1 to open Compartment Door and take out the Cartridge.(Fig2.1)
- 2.Load 6mm BBs into the Speed Loader. We recommend using TSD .20g BB's and above. Using lower quality BB's will void TSD's 30 Day Warranty.
- 3.Align the tip of the Speed Loader to the pellets drop of the Shell Cartridge. (Fig2.2)
- 4.Push the spring Rod to load pellets into the Shell Cartridge.Repeat this process until the Shell Cartridge is full.(It can be loaded with 30 bullets.)
- 5.Place the Cartridge's metal head on the Compartment Door's Inner Step as in (Fig.2.3) and close the door to load the Cartridge.

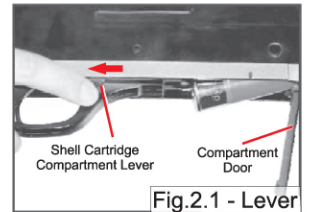


Fig.2.1 - Lever



Fig.2.2


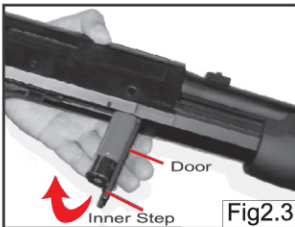


Fig.2.3

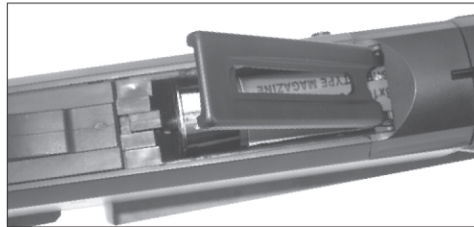

4 Firing

1. Set the Fire/Safety Button to the "FIRE" Position as in Fig.3.1.
2. Briskly pull the Pump Grip backward toward yourself until it clicks, and push it forward to complete the cocking in one continuous movement.
Note: You must do this to fire every shot.
3. Aim at your target and pull the trigger to fire.

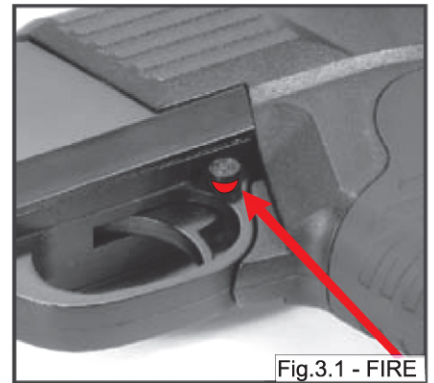


Fig.3.1 - FIRE



2. Squeeze and hold the trigger and, concurrently, pull the Pump Grip backward and push forward to shoot.
3. By quickly moving the Pump Grip back and forth while holding the trigger, you can pump Triple-Shots out continuously.


5 Maintenance

1. Maintenance when Bullet Speed Becomes low

- ① Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.
- ② To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.

Warning

- Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF)

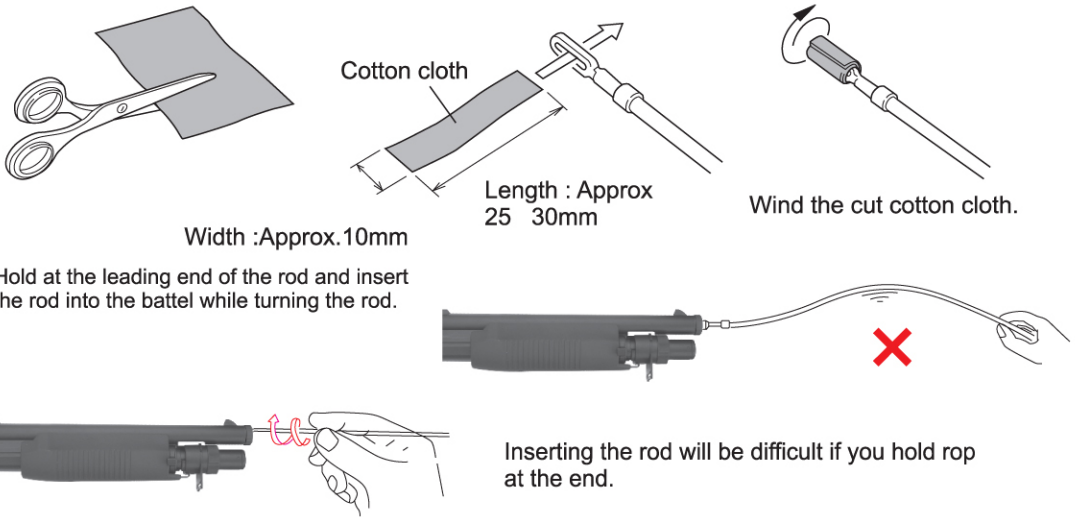

2. Removing clogged bullets

- ① Remove the magazine and return the hop up adjustment to the Normal position.
- ② Insert the cleaning rod from the load edge of the barrel, be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.

3. Normal Maintenance

- Keep the rifle in clean condition.
- Never use dirty, damaged or distorted bullets.
- For best performance, Only Use TSD BB's



- Regularly clean the barrel with soft cleaning rod



901 South Fremont Ave., Unit 218, Alhambra, CA 91803-4739,
 Phone: 626/281-0979 www.AirsoftSD.com
 Made in China. A TSD Product.