



BATTERY POWERED AIR GUN *Series*

SD2/5

SD3/6

A2/4

A3/5

M18
SMOKE
YELLOW
PB-22-119A

**ADJUSTABLE
HOP-UP
SYSTEM**

INSTRUCTIONS

USER RESTRICTED TO 18 YEAR OF AGE OR OLDER



! WARNING 警告

〔使用說明書〕

使用前請詳讀說明書，務必嚴格遵守
注意事項及使用方法。

(INSTRUCTION MANUAL)

Read this manual before operation. Operate the Air Gun
with full **recognition of warnings and cautions.**



1. 槍口不可指向人或動物
1. NEVER POINT THE MUZZLE TOWARDS A PERSON OR ANIMAL
You may be liable if you injure a person or animal. This Air gun is intended for use in designated area only.



2. 絕對不要由槍口探視，而傷及眼睛
2. NEVER LOOK INTO THE BARREL REGARDLESS OF WHETHER YOU THINK IT IS LOADED OR NOT.
If a BB Pellet hits your eye, you may be severely injured.



5. 射擊時請戴上護目鏡以確保安全
5. ALWAYS WEAR PROTECTIVE EYE GEAR.
When using the Air gun, you and all participants must wear goggles. Always be aware of potential ricochets.



6. 帶槍外出時，請用槍套包裝好
6. ALWAYS PUT THE AIR GUN IN A CASE OR BAG WHEN YOU CARRY IT, ESPECIALLY IN PUBLIC AREAS.



3. 請勿將槍置於未滿使用年齡之孩童容易取得之處
3. STORE THE AIR GUN IN PLACES OUT OF REACH OF MINORS.



4. 請勿任意將槍分解、加工、改造
4. DO NOT DISASSEMBLE OR MODIFY THE AIR GUN
This Air Gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the Air gun may be dangerous and may adversely affect its performance. The manufacturer's warranty will be void.



7. 槍在不使用時，請拆下電池並關保險
7. PUSHES THE FIRING SELECTOR TO THE LOWEST POSITION (Safety On) AND PUT OFF THE BATTERY WHEN NOT USE.



Perpare to action

這個產品是針對18歲以上的消費者所開發的休閒運動的電動槍，請務必遵守遊戲規則。帶槍外出時以槍套包裝好，雖然自己知道這只是玩具槍，但不知道的人會以為這是真槍。絕對不可拿槍指向人。

Since this Air gun maybe mistakenly identified as the real firearm, you should never point the Air gun towards a person in public, to avoid the serious consequences from armed law enforcement officers.
You must be 18 years or older to purchase and use this Air gun. Carefully read and understand these instructions before use.




BATTERY POWERED AIR GUNS



SD2/5



A2/4

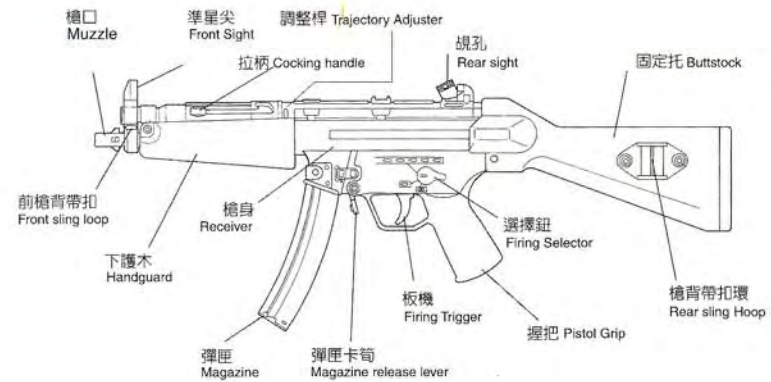

SD3/6



A3/5

 


(A3/5,SD3/6用) 小電池


(A2/4,SD2/5用) 大電池



Small/Regular Capacity battery (for A3/5,SD3/6)
8.4V-600-1100MAh
9.6V-600-1100MAh 電池




Large/High Capacity battery (for A2/4,SD2/5)
8.4V-1300-2400MAh
9.6V-1300-2400MAh 電池

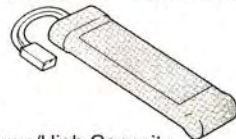

小電池 慢充器
Charger for Small size battery



大電池慢充器
Charger for Large size battery

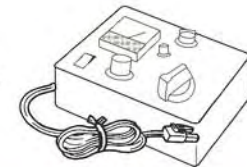

NO. MC-35 9.6V
AC/DC快速充電器
AC/AD Quick Charger

BATTERY POWERED AIR GUNS

Battery and charger sold separately (電池、充電器另購)




■ 裝入電池方法 Install Battery and Replace Fuse




將托底板向下壓電池插頭向外拉出
Push down and take off the butt-plate, then take the wire, battery connector and fuse container out of the buttstock.

更換保險絲 FUSE REPLACEMENT

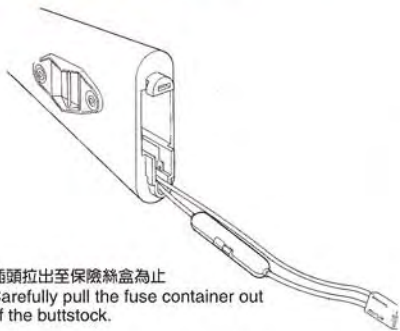


1 插頭拉出至保險絲盒為止
Carefully pull the fuse container out of the buttstock.

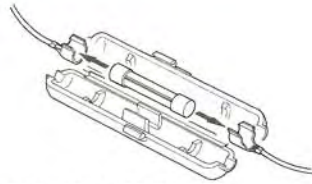


2 打開保險絲盒將保險絲裝上
Open the fuse container and replace the fuse.

更換電池 BATTERY INSTALLATION

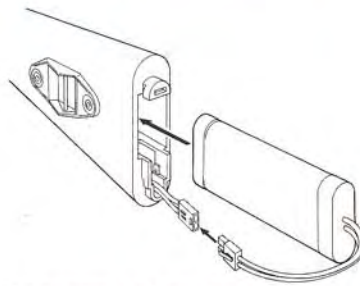


1 將電池插頭接合後再放入電池
Connect the battery to the battery connector carefully.

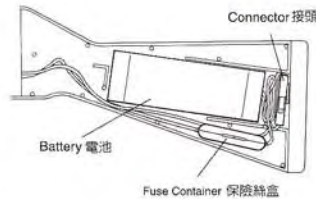


2 電池與保險絲組合完成後位置
Carefully put the battery and wire back into the buttstock.




更換保險絲與電池 BATTERY AND FUSE REPLACEMENT

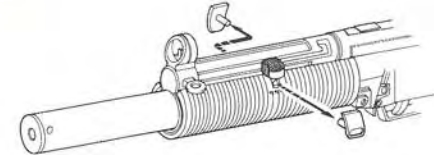

1 將固定銷拆下
Pull out the locking pin of the handguard.

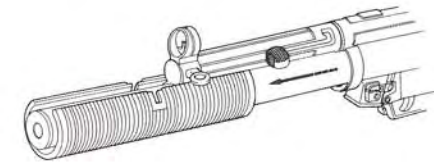


2 將下護木往前拉出
Slide the handguard forward.

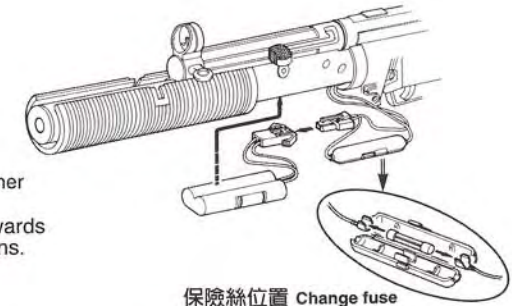

3 將電池與保險絲接合後，再裝入護木裡
(Left) Connect the battery to the battery connector.
(Right) Open the fuse container and replace the fuse.
Slide the handguard backwards and re-insert the locking pins.

保險絲位置 Change fuse

4 組裝後完成位置
THE POSITION OF THE BATTERY AND FUSE

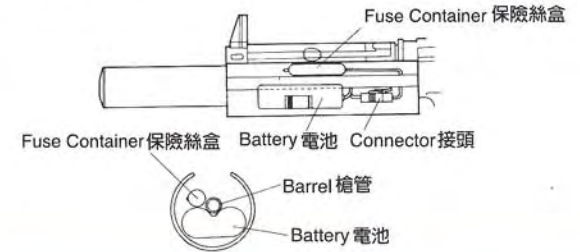

BATTERY POWERED AIR GUNS



單連發選擇方式 Selector and Safety Lever



連發 Full Auto

單發 Semi Auto 保險 Safety

彈夾上下方式 Load and Unload the Magazine




- 將彈匣往上推入即可
- 按彈匣卡即可將彈匣拆下




兩個彈匣卡箱均可使用
Magazine separate lever
(2 variations)

- Insert the magazine until it is locked.
- Push down the magazine release button to eject the magazine.
- Push forward the magazine release lever to eject the magazine.

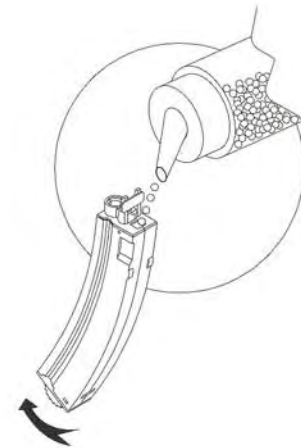

Hop-up 調整 Trajectory Adjustment(Hop Up)

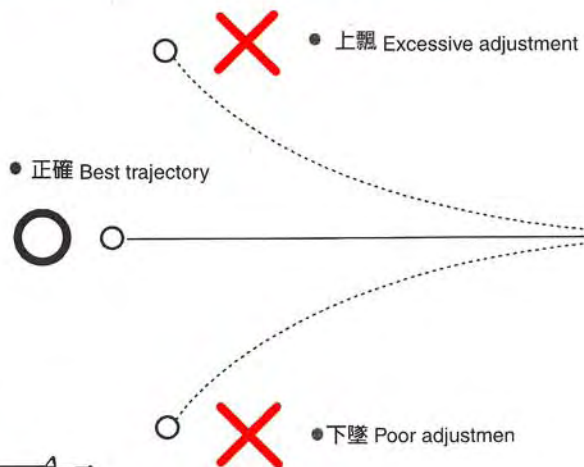

調整法

子彈如果向上飄，調整桿請往後拉，向下墜請往前推。
子彈向前呈一直線才是正確的方法。
有了HOP-UP後，讓您的射擊準確度大大的提升。

Adjustment

Push the Trajectory Adjustor to low position. Switch the Firing Selector on full Auto position and fire. Slowly adjust the Trajectory Adjustor for the best shooting trajectory



BATTERY POWERED AIR GUNS

